

INSTALLATION DIAGRAM

H00600VR — VOLVO RETROFIT KIT

IMPORTANT

THIS HEIGHT CONTROL VALVE (HCV) KIT CONTAINS 2 INSTALLATION DIAGRAMS.
PLEASE REVIEW YOUR APPLICATION FOR THE PROPER PLUMBING AND KIT OPTION.

* CONSULT OWNERS MANUAL FOR RIDE HEIGHT SPECIFICATIONS.

CONTENTS OF KIT

HCV ASSEMBLY H00600-23

PART NO	PART DESCRIPTION	QTY
H00600-00	HEIGHT CONTROL VALVE	1
H13964	1/4-20 LOCKNUT	1
H15020	4" LEVER	1
H15032	BALL STUD	1
H15025	1/4 SCREW	1
H15035A	BRACKET	1
H13964	1/4-20 NYLOCK NUT	2
H13404	WASHER	2
H13449	1/4-20 BOLT	2
H15036	TEE FITTING	1
H15047	ELBOW	1

PARTS LIST HPB600-3

PART NO	PART DESCRIPTION	QTY
H15040	LINKAGE	1
H15606	M6 NYLOCK NUT	2

ADDITIONAL PARTS NEEDED FOR VHD WITH DUAL EXHAUST

VOLVO

PART NO	PART DESCRIPTION	QTY
8078144	ANCHORAGE	1

REMOVED PARTS

VHD WITH DUAL EXHAUST

PART DESCRIPTION	QTY
HEIGHT CONTROL VALVE	1
LINKAGE	1
HEATSHIELD	1
LEVELING VALVE BRACKET	1
ANCHORAGE	1

VN & VHD WITHOUT DUAL EXHAUST

PART DESCRIPTION	QTY
HEIGHT CONTROL VALVE	1
LINKAGE	1

FIGURE 1: VHD WITH DUAL EXHAUST BEFORE CHANGES.
VIEW FROM REAR OF THE VEHICLE.


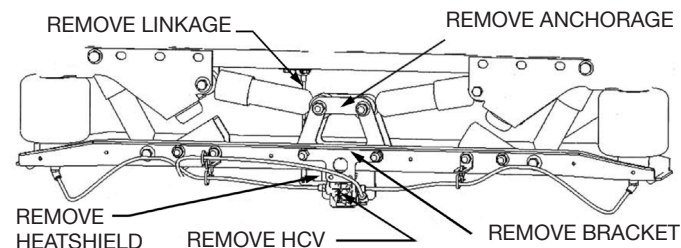


FIGURE 1: VN BEFORE CHANGES.
VIEW FROM FRONT FACING REAR OF THE VEHICLE.

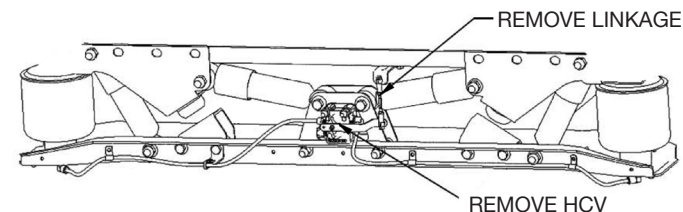


INSTALLATION DIAGRAM

H00600VR — VOLVO RETROFIT KIT

IMPORTANT

INSTRUCTIONS FOR VHD WITH DUAL EXHAUST

* CONSULT OWNERS MANUAL FOR RIDE HEIGHT SPECIFICATIONS.

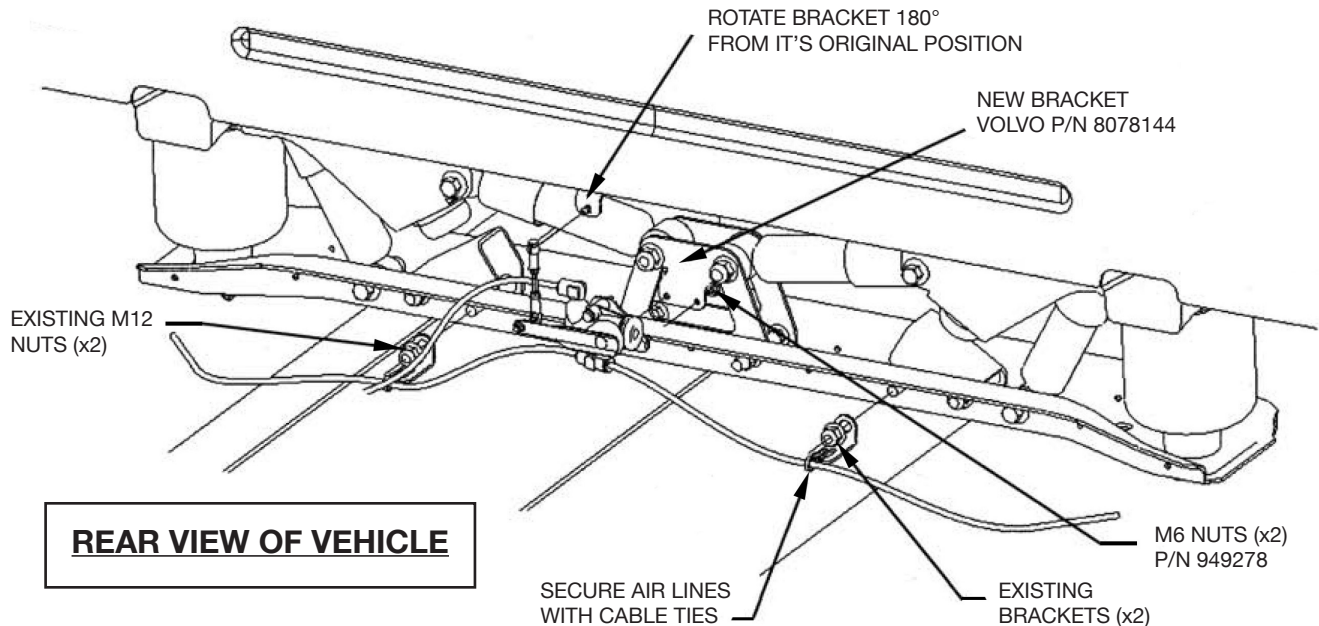

IMPORTANT

INSTRUCTIONS FOR VN & VHD WITHOUT DUAL EXHAUST

* CONSULT OWNERS MANUAL FOR RIDE HEIGHT SPECIFICATIONS.

